



# Asus ROG GL551J Battery Replacement

Asus ROG GL551J guide on how to remove and replace the battery.

Written By: Jason Nguyen



## INTRODUCTION

This guide is a prerequisite to completing any other replacement guides for the Asus ROG GL551J. Removing the battery removes power from the device to prevent potential harm from electric shock.

## Step 1 — Battery



- Lay device on a flat surface with battery facing up.

## Step 2



- Locate latch below battery and push right.

## Step 3



- Battery should release upwards. Pull battery out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 01:46:29 PM.